

KNOW SLACK-JACK™

Installation Instructions: Mini-Jack Models

US PATENTS: 7,762,030; 7,665,258; 7,617,642; 7,340,867; 7,159,366; 6,951,078; 6,688,058; 6,494,654; 6,161,350



Check Approved Plans for Locations To Install Mini-Jack™ Device(s).

Verifique los planos autorizados para instalar el Mini-Jack™.



Place Color-Coded Bearing Plate.

Coloque el plato de compresión. El color que el plano te indique.



Drop Mini-Jack™ Over Rod.

Deje caer el Mini-Jack™ sobre el tornillo.

KNOW SLACK-JACK™

Installation Instructions: Mini-Jack Models

US PATENTS: 7,762,030; 7,665,258; 7,617,642; 7,340,867; 7,159,366; 6,951,078; 6,688,058; 6,494,654; 6,161,350



Install Hex Nut.

Instala la tuerca exagonal y apriete con la mano.



Tighten Hex Nut by Hand.
No Tools Required.

Para apretar la tuerca exagonal no requiere herramienta.



Using Two Hands, Remove Pull Clip to Activate the Mini-Jack™ Device. Grip Device with One Hand and Pull Clip With Other.

Para activar el dispositivo Mini-Jack use las dos manos y remueva el perno o clip. Sujete el dispositivo con una mano y remueva el perno o clip con la otra.

KNOW SLACK-JACK™

Installation Instructions: Mini-Jack Models



Ensure Pull Clip is Completely Removed.

Asegurese que el perno o clip este completamente removido.



Store Pull Clip as Shown for Inspection Verification.

Guarde el perno o clip como se muestra para inspección.


US PATENTS: 7,762,030; 7,665,258; 7,617,642; 7,340,867; 7,159,366; 6,951,078; 6,688,058; 6,494,654; 6,161,350

KNOW SLACK-JACK™

Installation Instructions: Mini-Jack Models

Completed Installation (typical)

Instalación Completa (Típica)

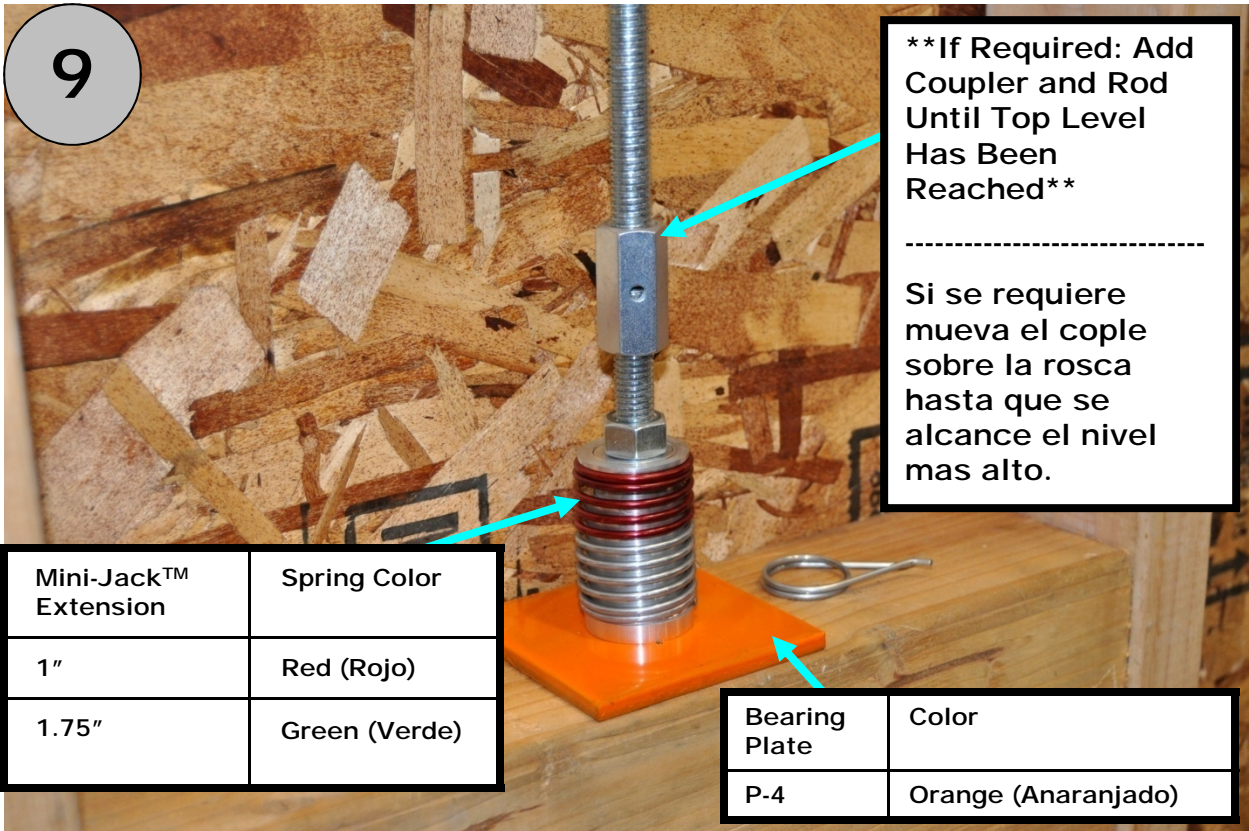

9

****If Required: Add Coupler and Rod Until Top Level Has Been Reached****

Si se requiere mueva el cople sobre la rosca hasta que se alcance el nivel mas alto.

Mini-Jack™ Extension	Spring Color
1"	Red (Rojo)
1.75"	Green (Verde)

Bearing Plate	Color
P-4	Orange (Anaranjado)

US PATENTS: 7,762,030; 7,665,258; 7,617,642; 7,340,867; 7,159,366; 6,951,078; 6,688,058; 6,494,654; 6,161,350